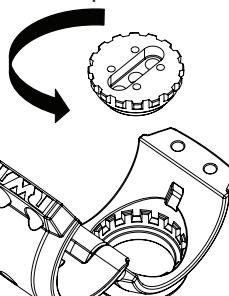
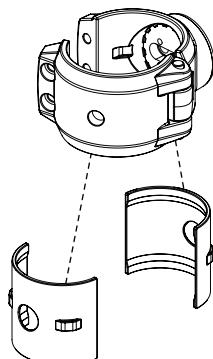
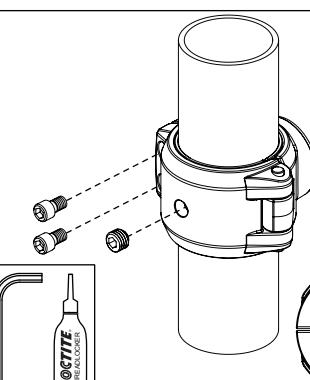


HARDWARE	PARTS	TOOLS REQUIRED

A	<p>Test fit the clamp to your tower and rotate the internal rotational disc to orient your board rack or speaker in the desired position.</p> <p>Note - Internal disk will rotate through each position for perfect alignment</p> 	B <p>Apply RED Loctite to your speaker or board rack hardware and fasten to universal clamp.</p> <p>Make sure the plastic spacer is sandwiched between the clamp and product it is supporting</p> 
C	 <p>Depending on the tubing diameter of your tower, place the proper size plastic insert into the clamp, 1.9" or 2.375". (1.6", 2.0" and 2.5" are available upon request).</p>	D  <p>Position the clamp around the tubing. Apply RED Loctite to the clamp (A) bolts and fasten the clamp into position on the tube. Apply RED Loctite to the clamp (B/C) set screw and tighten.</p> 