

Actuator Adjustment

NOTE: Tools Required



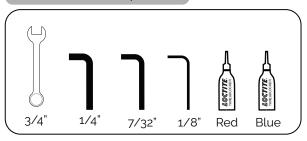

2 Person Job

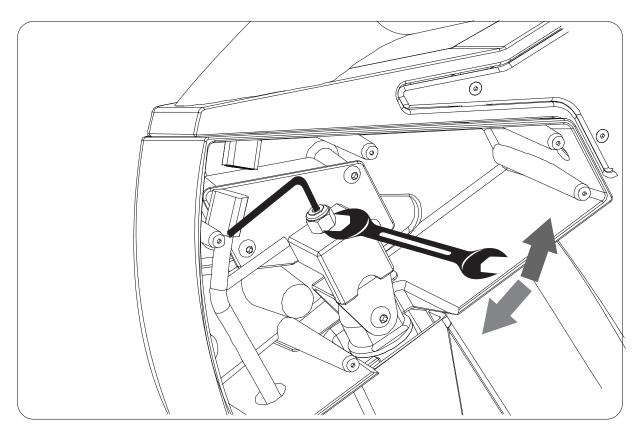


Step 1

Get somone to hold the Coverfire Speker and remove the five bolts Holding the speaker to the tower using a 7/32" Allen Key.


Step 2


Drop the speaker housing down and pull it toward the stern of the boat and hold untill re-install of the speaker.

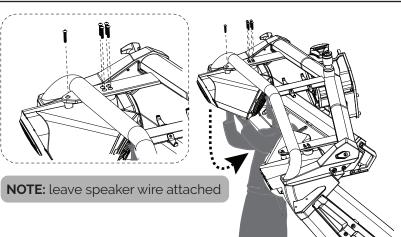

Step 3

Remove the access pannel with a 1/8" Allen key.

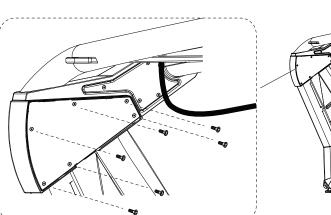

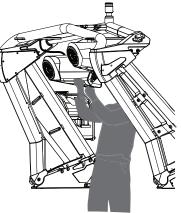


Step 4

To remove the slack in the actuator start by loosening the locknut with a 3/4" Box End Wrench. Using a 1/4" Allen key, tighten the rob line by rotating the bolt counter clockwise. Once tight, lock the bolt in place with the locknut using the 3/4" Box End Wench.


Note!

Unlock both cam latches and tighten one side untill the tower comes in contact with the rubber bump stops you will have to repeat this for the other side. Do not over tighten as this adds excessive wear to the actuator and Rob line.

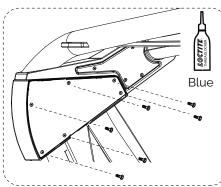


Step 5 Install bolts. Re-apply Blue Loctite.

ROSUELL

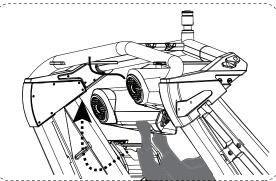

Step 6

Move speaker back into positon and feed wiring into the tower.

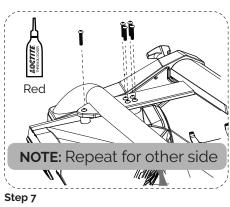

Install bolts and apply Red Loctite.

