


---

# Chaparral Triton Board Rack

Installation & Usage Instructions

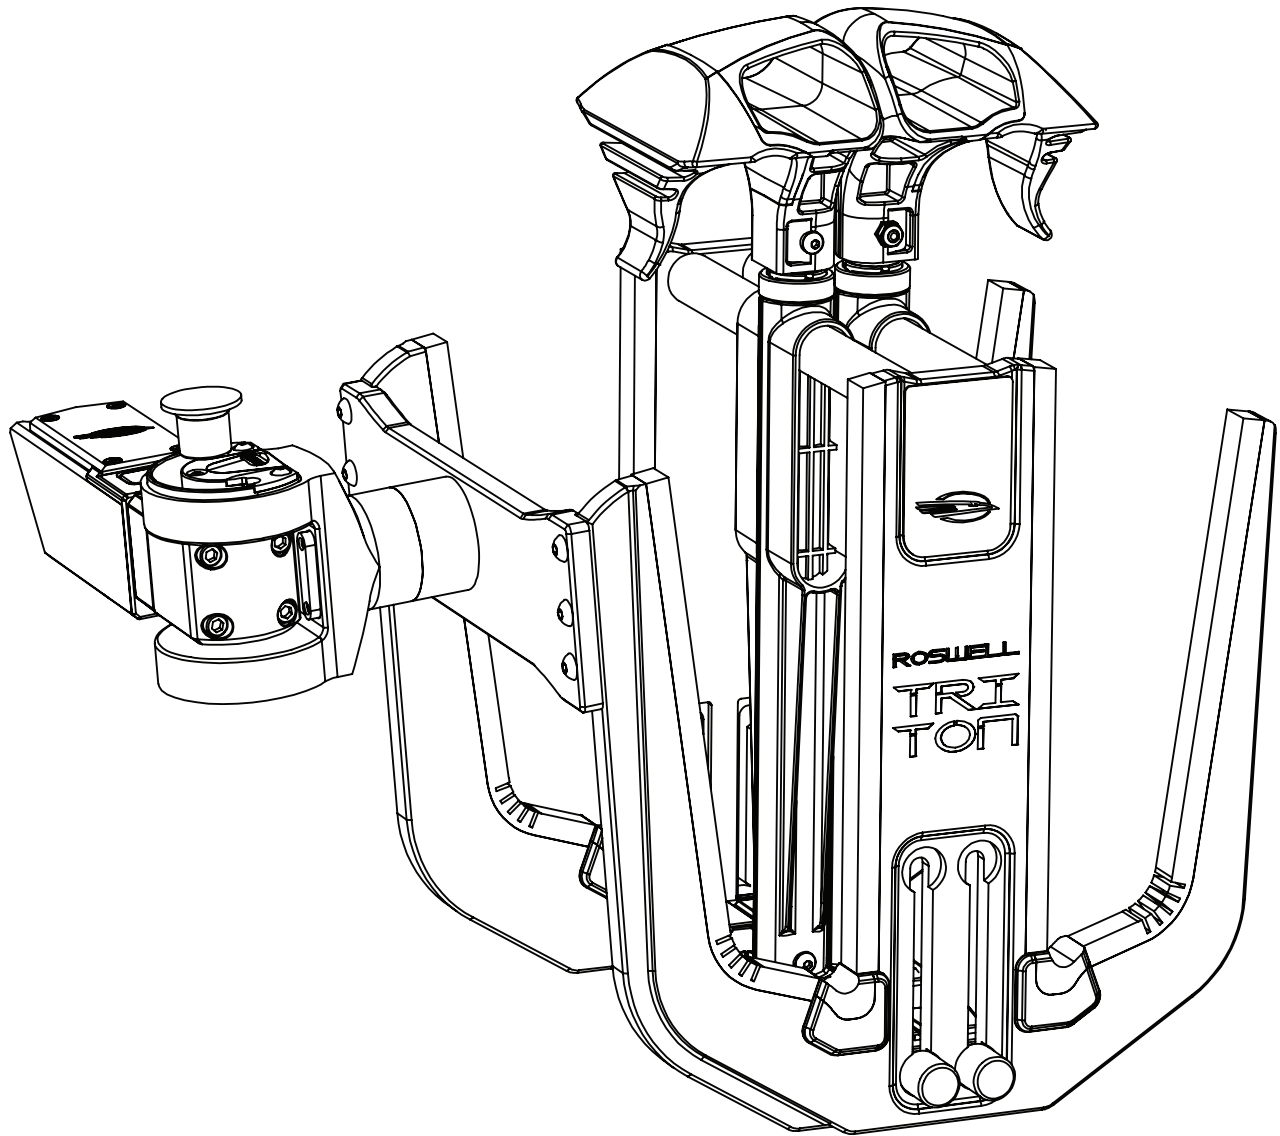


---

Part # C927-1801


Information: [info@roswellmarine.com](mailto:info@roswellmarine.com)  
If you have any questions please call : 1-321-638-1331



## PACKAGE CONTENTS

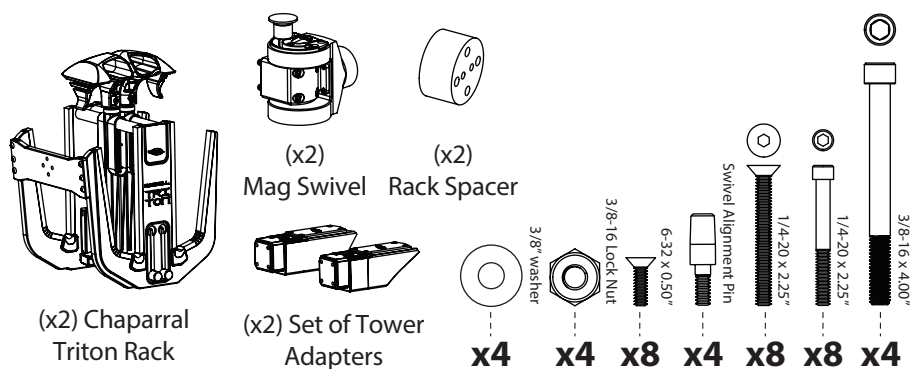

## TOOLS NEEDED

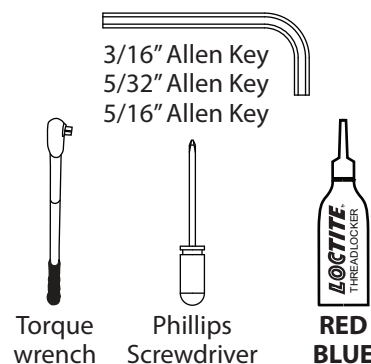


## ⚠ ATTENTION ⚠


**Roswell strongly recommends that a routine inspection of hardware and components be done to ensure proper function and safety and to maximize product life. If bolts are found to be loose, discontinue use until Loctite is re-applied and bolts are re-tightened.**

**A**

First, bolt the adapter blocks to the port and starboard tower tubes. Torque the locknuts to 25ft-lbs. Second, apply blue threadlock to the four 6-32 x 0.50" and install the aluminum cover plate.

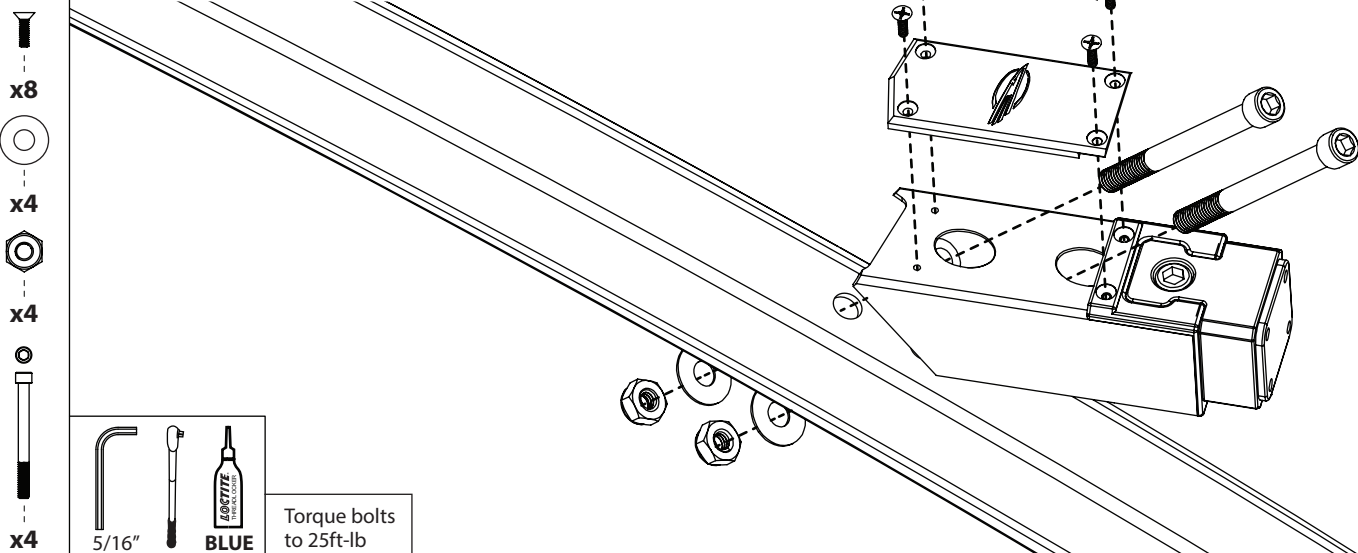**B**

Apply red thread lock to the swivel alignment pins and thread them into the board rack spacer. Next, apply red thread lock to the countersunk 1/4-20 x 2.25" screws and attach the swivel and spacer to the board rack. Torque to 15 ft. lbs.

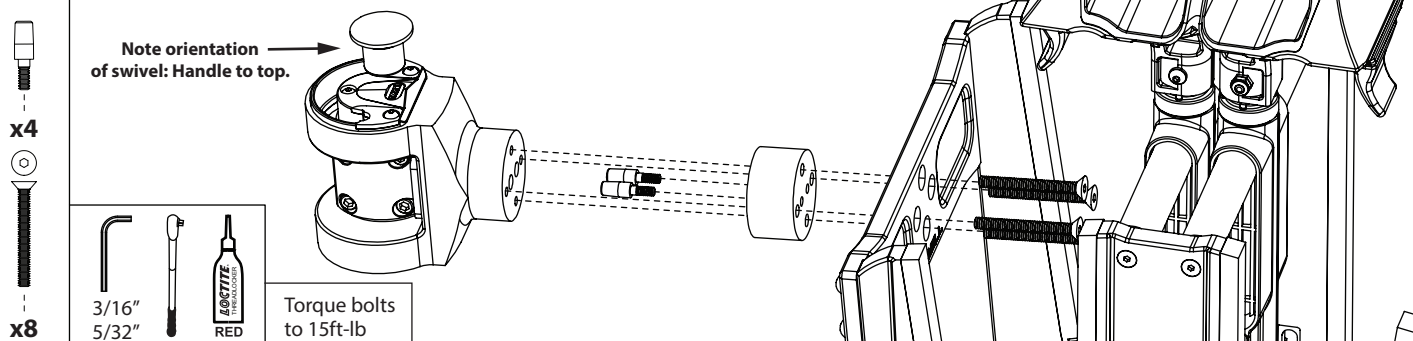

**C**

Mount one rack to each swivel block on either side of your tower using the hardware provided. The racks are not side specific. Apply red thread lock to all 8 bolts first.



x8




3/16"




LOCTITE  
RED

Torque bolts  
to 15ft-lb

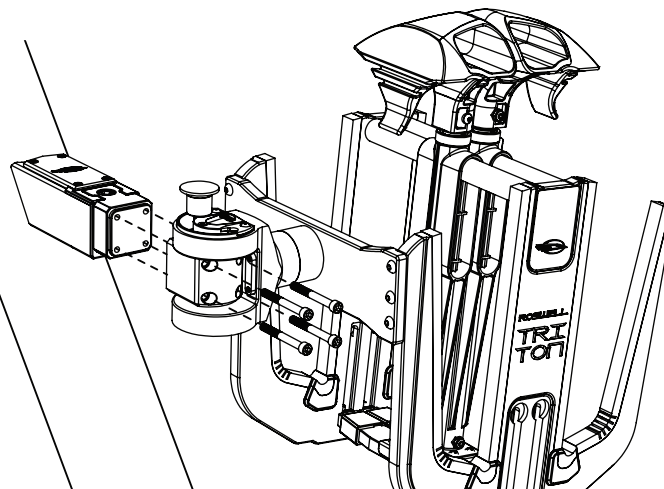**D**


Your Triton rack is designed to be adjustable to fit just about any size of wakeboard, wakesurfer or wakeskate. There are 2 settings, one for narrower boards, one for wider boards.

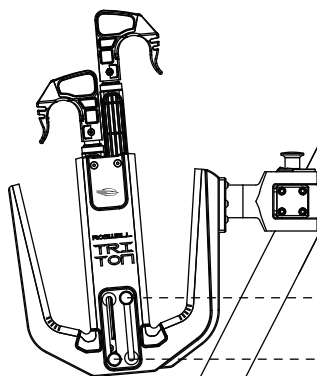

Wide board setting

Narrow board setting

In the narrow setting, the max board width should be no greater than 20" inches and no less than 14" inches.

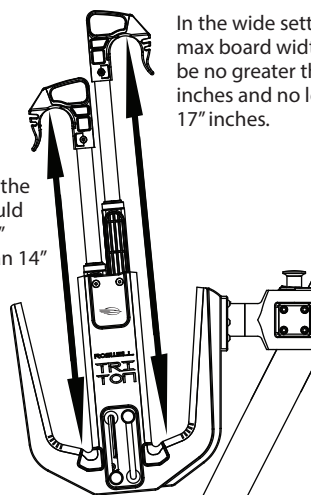


In the wide setting, the max board width should be no greater than 23" inches and no less than 17" inches.


**E**

Adjust your telescopic arms one at a time. To adjust your telescopic arms loosen the knobs on both sides of the rack for the same arm until the knobs are past the counterbored holes they sit in. At this point you will be able to slide the whole arm assembly up or down to the next position where you will then retighten the knobs.

Make sure your adjustment knobs are tight periodically.

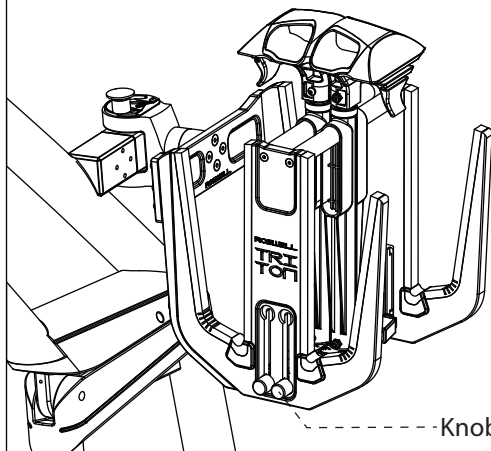


Knob to loosen/tighten

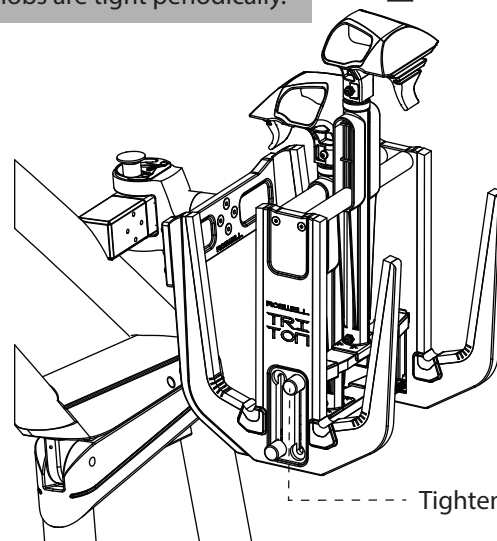


Tighten

## Inserting Boards


1 : Slide your board into one of the Triton rack slots.

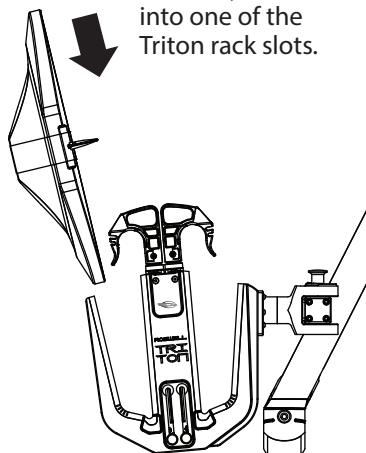


2 : Pull up on the telescopic arm and flip your board towards it.

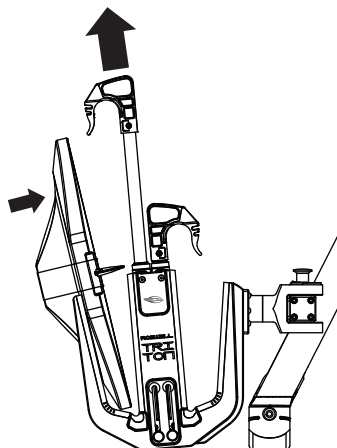

3 : Let the telescopic arm clamp down over your board. To remove a board, repeat steps 1-3 in reverse

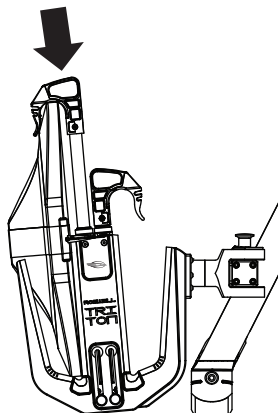

Locate wakeboards with sharp edges within the harder rubber wakeboard pads in the tine slots. This is essential to avoid damaging the softer foam, which is intended for fragile surfboards and wakesurfers.

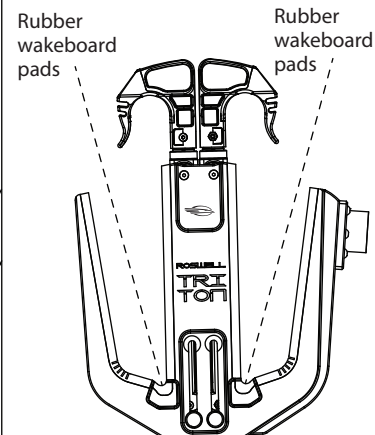

## Use &amp; Care

It is necessary to regularly check the tightness of the bolts on your clamp. Bolts and screws tend to rattle loose over time due to the vibrations and shaking that your boat experiences while on the water or in transit.

Do not clean your this product with harsh cleaners. Your rack and clamp is built from billet aluminum with a clear anodized coating to protect it from corrosion. Harsh cleaners like brake cleaner or acetone can damage this anodizing and this product will start to corrode. A damp rag with a mild soap is ideal for cleaning your rack and clamp.