


---

# Nautique Triton Board Rack

## Installation & Usage Instructions

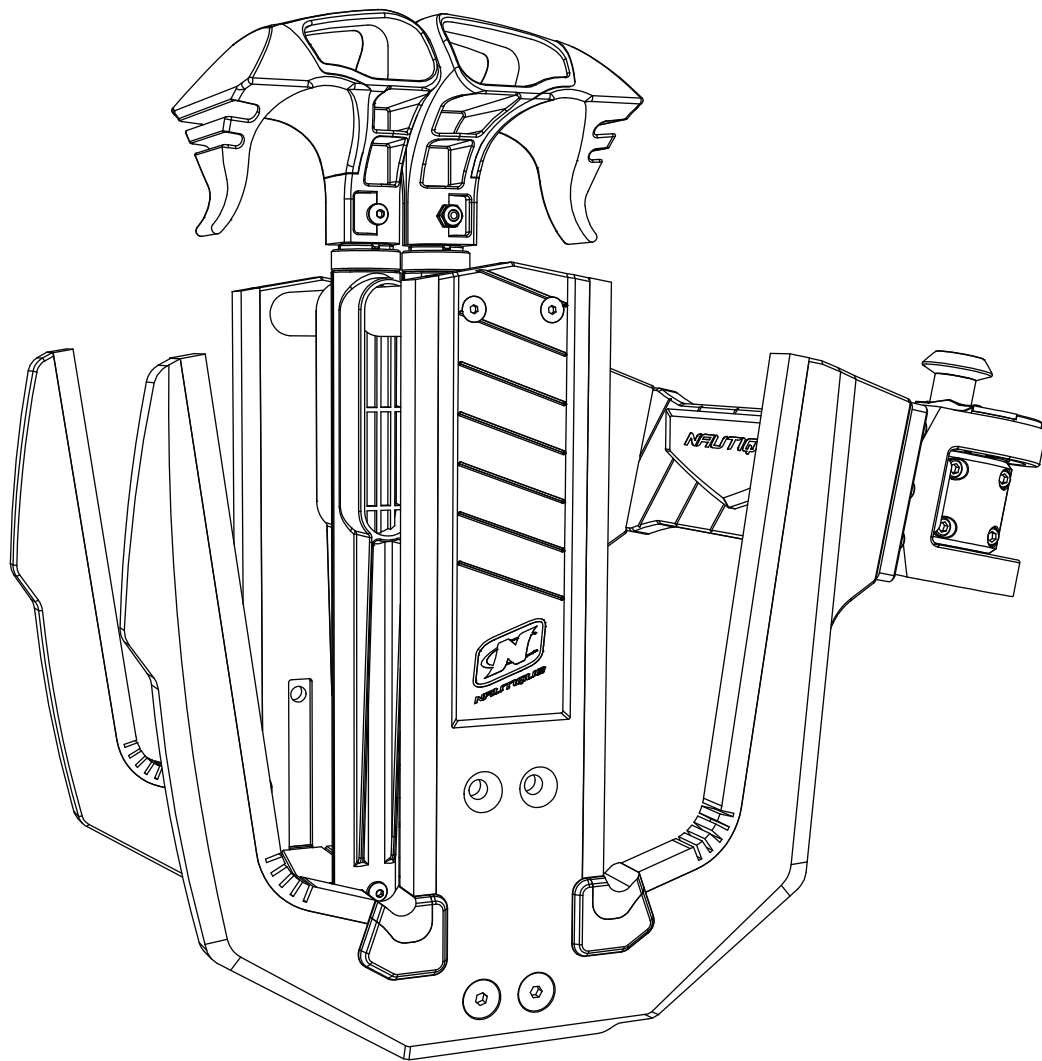


---

Part # C917-170416

**Information:** [info@roswellglobal.com](mailto:info@roswellglobal.com)  
If you have any questions please call : 1-321-638-1331



## PACKAGE CONTENTS

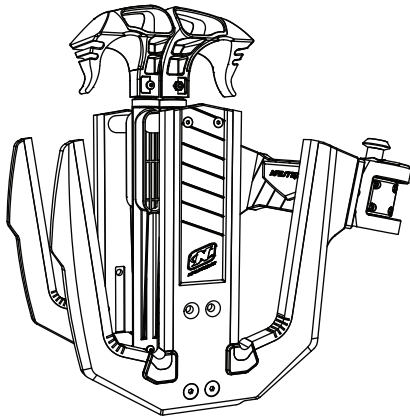


(x2) Nautique Triton Board Racks with Swivels




x8

## TOOLS NEEDED

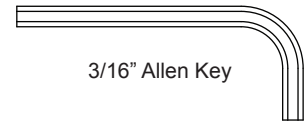

3/16" Allen Key

 

Torque wrench  
with 3/16"  
Allen bit





RED

## ⚠ ATTENTION ⚠

 Roswell strongly recommends that a routine inspection of hardware and components be done to ensure proper function and safety and to maximize product life. If bolts are found to be loose, discontinue use until Loctite is re-applied and bolts are re-tightened.

**A**

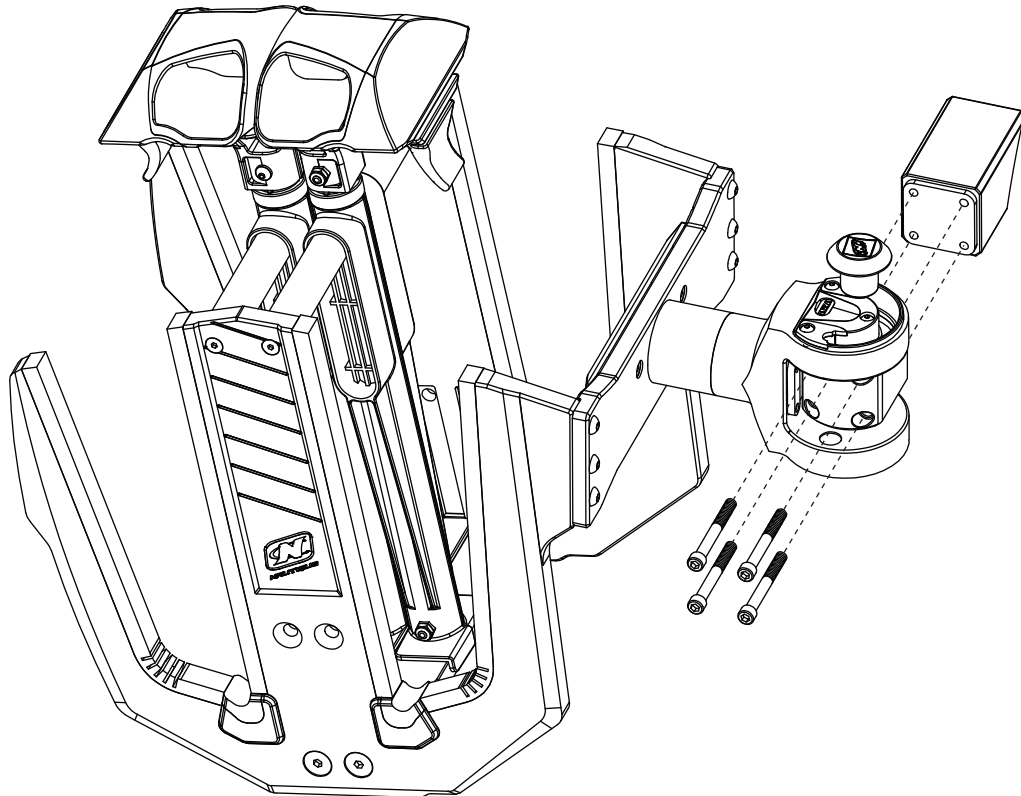

x8

Torque bolts  
to 15ft-lb



3/16"




RED


Carefully remove your Nautique Triton racks from the packaging. Mount one to each swivel block on either side of your tower using the hardware provided. The racks are not side specific. Apply red Loctite to all 8 bolts first.

## A

Your Triton rack is designed to be adjustable to fit just about any size of wakeboard, wakesurfer or wakeskate. There are 2 settings, one for narrower boards, one for wider boards.


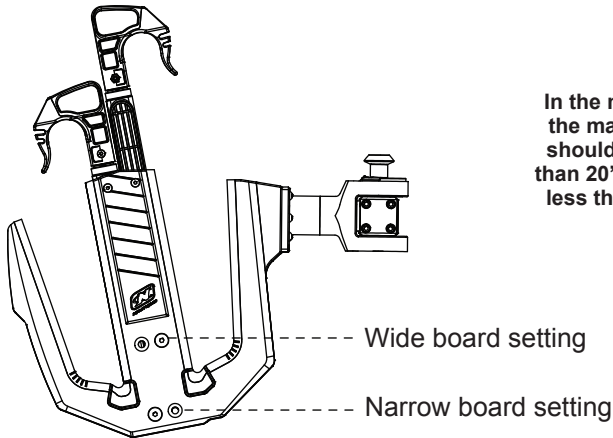


In the narrow setting, the max board width should be no greater than 20" inches and no less than 14" inches.

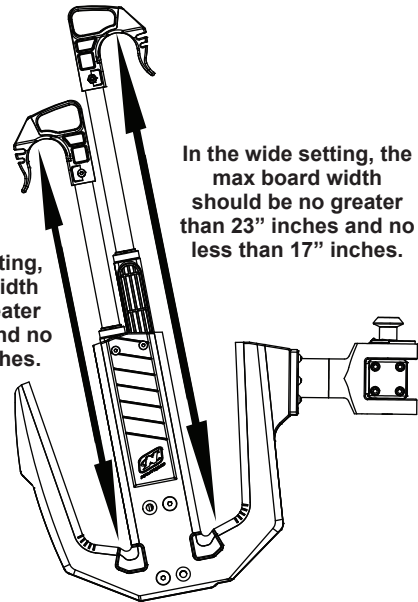


## B

Adjust your telescopic arms one at a time. To adjust your telescopic arms loosen and remove the bolt on each side of the rack for the same arm. Do not remove all 4 bolts at the same time. Slide the whole arm assembly up or down to the next position. Re-apply red Loctite to the bolts and tighten.

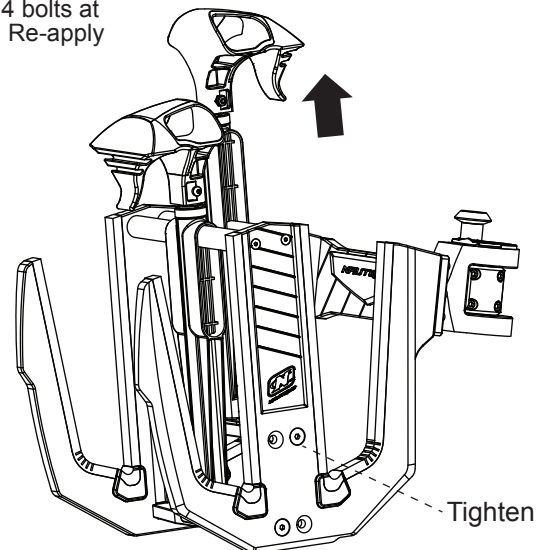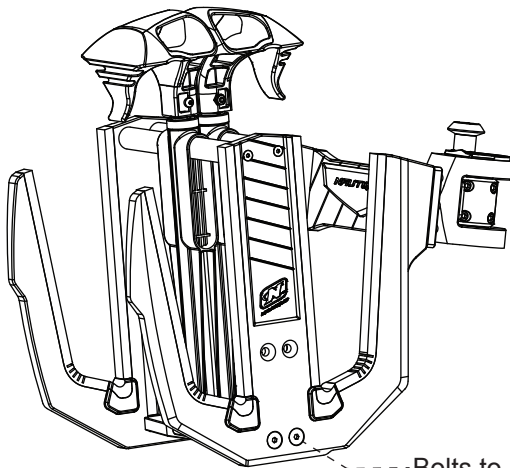


## C


### Inserting Boards

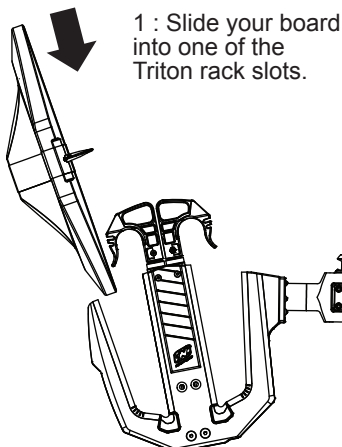

2 : Pull up on the telescopic arm and flip your board towards it.

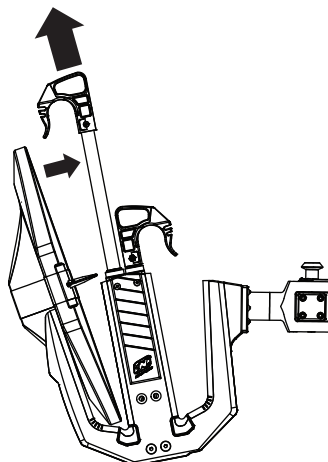

3 : Let the telescopic arm clamp down over your board.  
To remove a board, repeat steps 1-3 in reverse

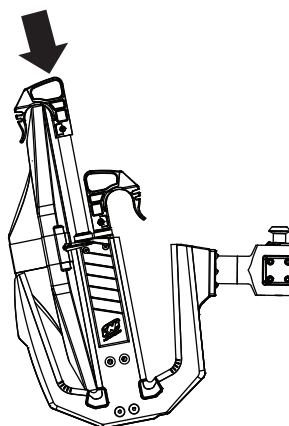

Ensure wakeboards with sharper edges are located within the harder rubber wakeboard pads in the tine slots. This is essential to avoid damaging the softer foam protection intended for fragile surfboards and wakesurfers.

