


### Hardware

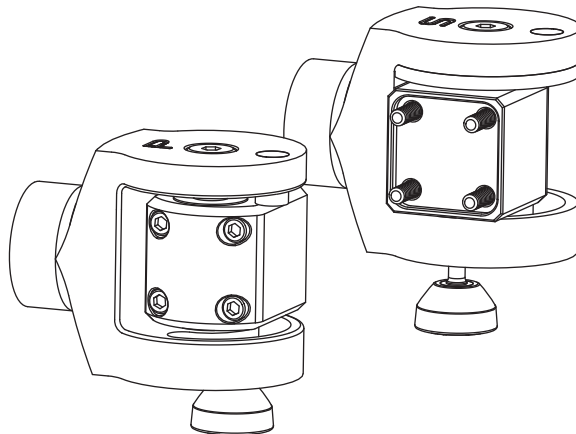


### Tools Required





**A**

Apply RED Loctite to 4 bolts and mount the swivel to the tower mount as illustrated. Make sure the end of the swivel is properly seated on the tower mount and that the push button is facing downward. Torque bolts to 15 ft lbs.

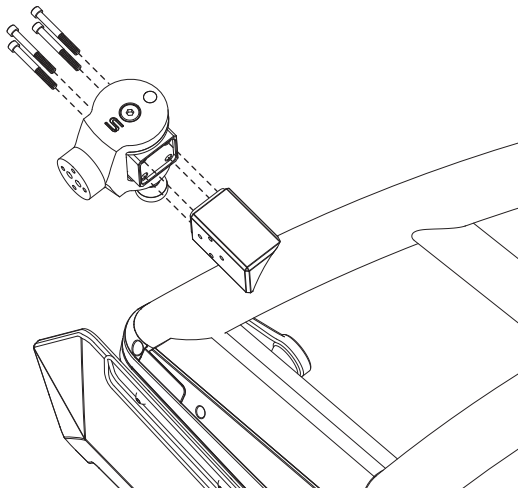

**B**

Apply RED Loctite to the board rack's 2 custom bolts and assemble the spacer to rear of the backing plate. Torque bolts to 9.5 ft. lbs

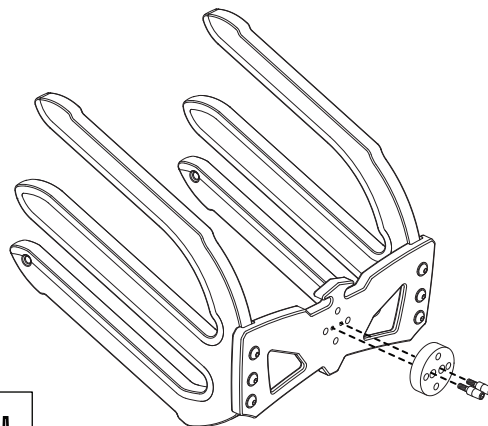

**C**

Apply red Loctite to the board rack's 4 flat head bolts and mount the rack to the swivel. Ensure the spacer is mounted between the rack and the tower. Repeat all steps for other side. Torque bolts to 15 ft lbs.

