

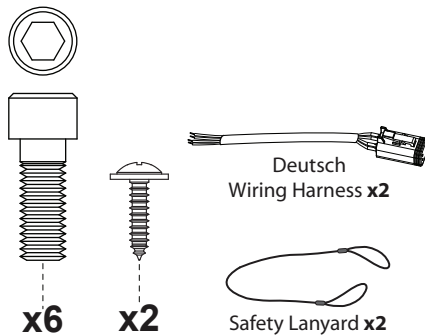


### Speaker Hardware

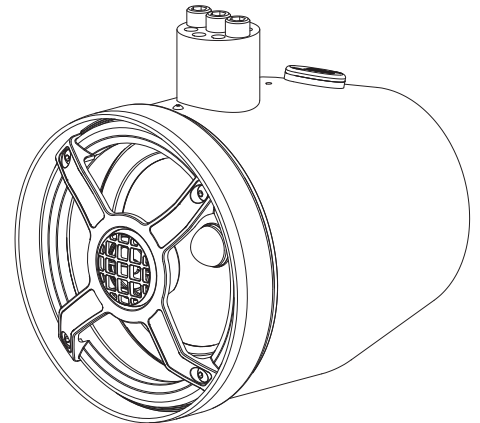

### Tools Required

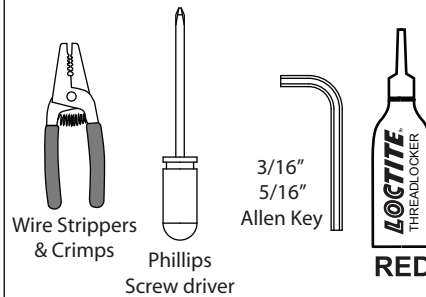

### NOTES

**\*BEFORE WIRING ANYTHING PLEASE MAKE SURE YOUR BATTERIES ARE DISCONNECTED\***

**A**

- You will need to connect the included 20" Deutsch wiring harness to your tower wires according to the chart in **STEP B**.


**B**

### Deutsch Wiring Harness


	<u>Wire Colour</u>	<u>Function</u>
Port Deutsch	White	Port Speaker +
	White/Black	Port Speaker -
	Light Blue	LED +
	Black	LED -
	<u>Wire Colour</u>	<u>Function</u>
Stbd Deutsch	White	Stbd Speaker +
	White/Black	Stbd Speaker -
	Light Blue	LED +
	Black	LED -




**C** Apply RED Loctite to 3 bolts and fasten speaker through tower speaker plate using a 5/16" allen key.

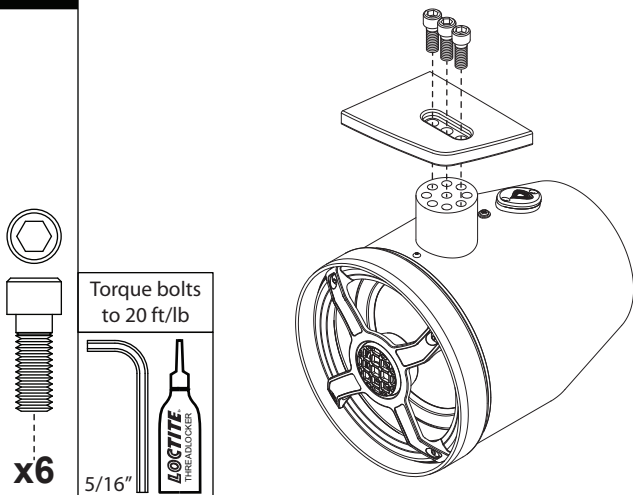


**D** Remove Deutsch port cover and with your stereo/amp switched off, insert the Deutsch wiring harness into speaker.

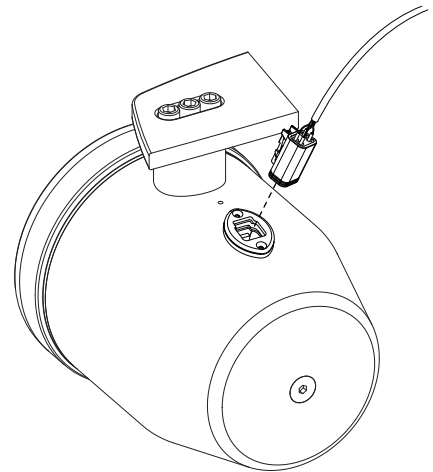


**E** Loop the safety lanyard over the tower next to the speaker clamp.

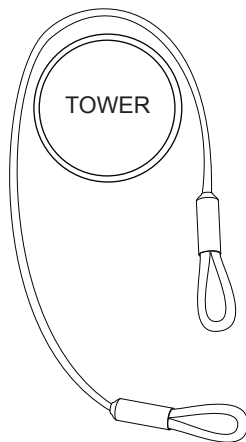

**F** Feed one end of the lanyard through the other end.

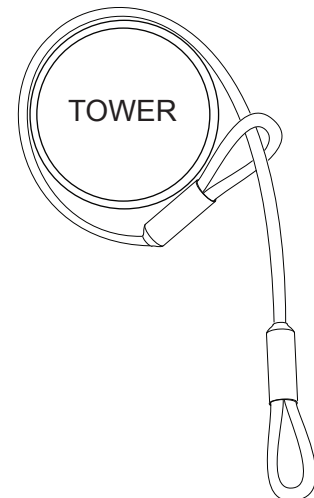

**G** Insert the screw through the washer and lanyard loop.

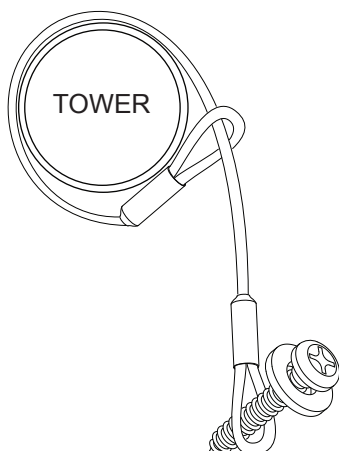

**H** Using a Philips head screwdriver, securely attach the lanyard to the small hole on the speaker between the base of the clamp and the deutsch connector.. Do not overtighten.

