


200 Ski Tower Bimini Installation Instructions

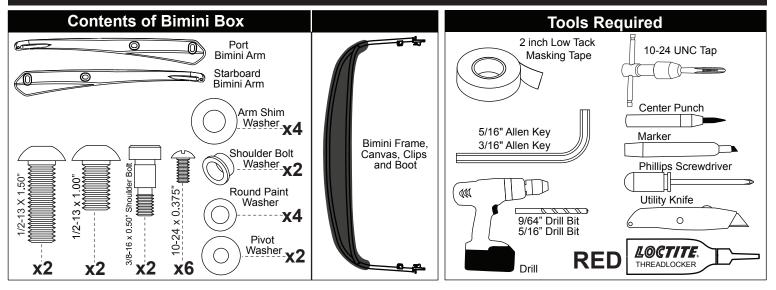


Towers and tower accessories require regular maintenance. Tower hardware and retaining bolts can become lose with normal operation; it is owner's responsibility to ensure all hardware is kept tight and secure. Corrosion and/or oxidation on coated surfaces as well as on all hardware are specifically excluded from warranty as their care, maintenance, and environments of use cannot be controlled by Roswell Wake Air. Damage due to misuse or improper care is also excluded from warranty. For full warranty details please contact your local dealer.

Roswell recommends 2 people for installation of the bimini.

Important

Read & follow these installation instructions carefully. Failure to do so may result in an improper bimini installation. Damage to parts due to improper bimini installation is not covered under warranty.

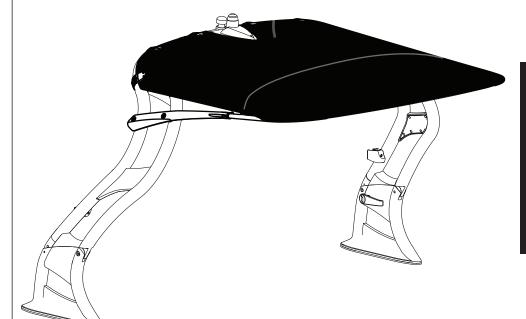

Attention

Installing your bimini clips in freezing or near freezing temperatures is NOT recommended. Failure to do so will result in broken bimini clips. Damage to parts from improper use is not covered under warranty.


www.roswellwakeair.com


Information: info@roswellwakeair.com **Warranty:** warranty@roswellwakeair.com


If you have any questions please call: 1-855-962-WAKE(9253)






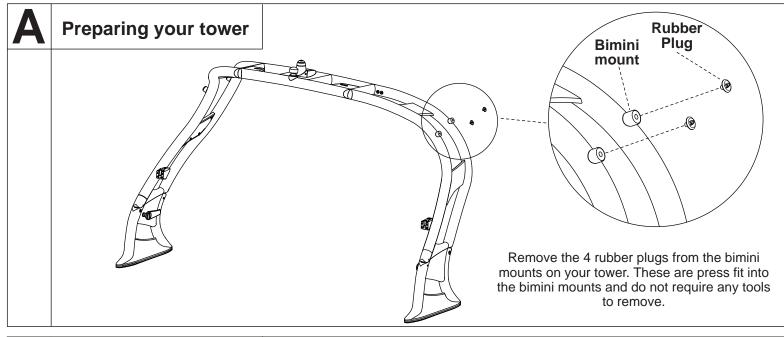


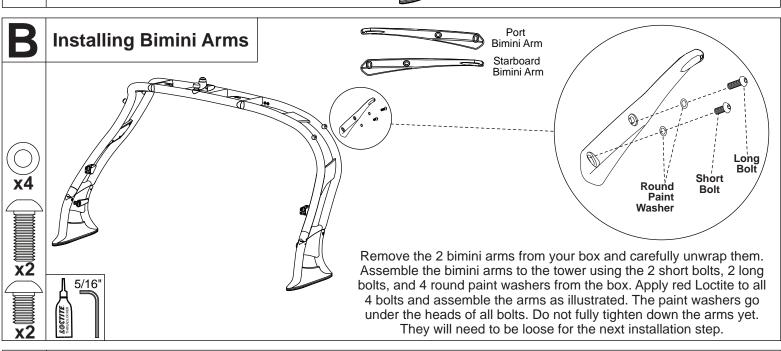


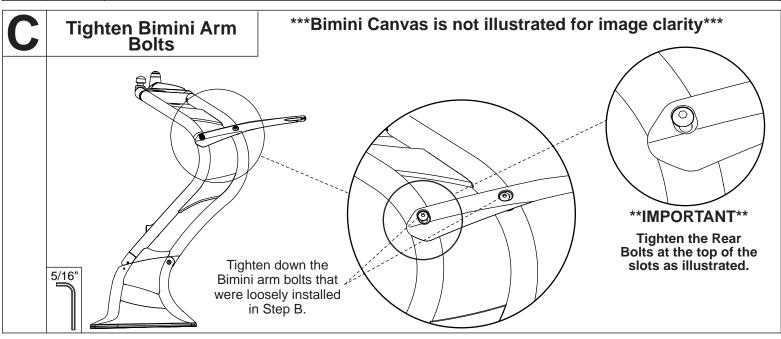



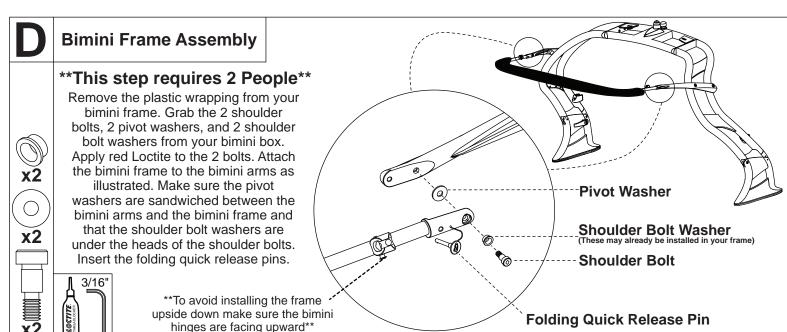

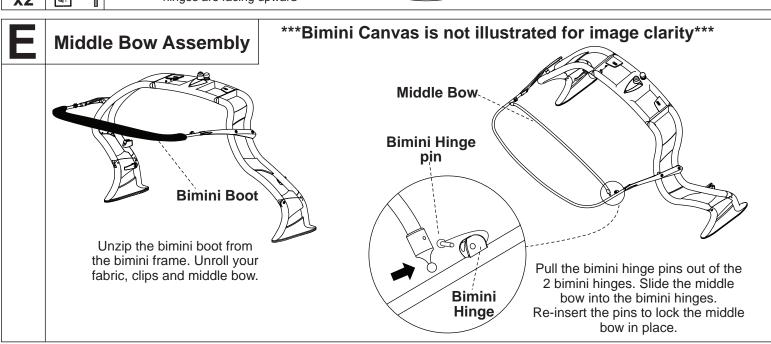

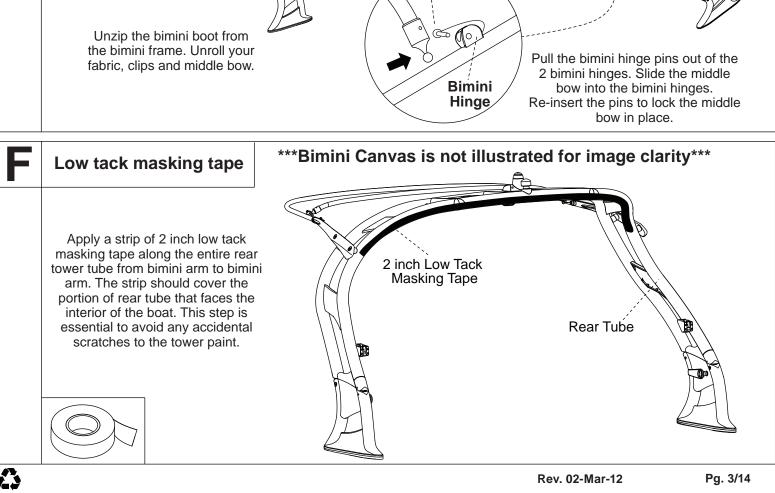




Fabric-Clips Installation: Step 1

Snap the 6 bimini clips around the rear tube of the tower as illustrated. Adjust the bimini clip locations until they are symmetrical and the fabric is tight and wrinkle free.




IMPORTANT

The position of the center clips is the most important to begin with. Make sure that the clips are positioned along the rear tower tube so that the fabric is centered around the **Light Housing.**

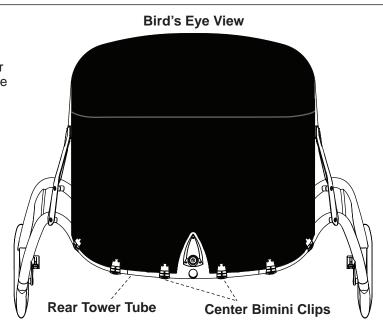


Fabric-Clips Installation: Step 2

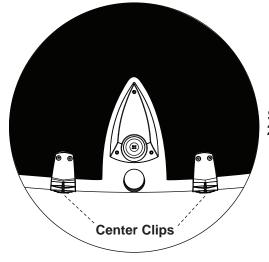


Start with the 2 center clips illustrated.

Masking Tape


Prior to marking the center points for the 2 center clips in Step I, it is important to pull/rotate the clips until the clip top surface is parallel to the top of the tower. With a good grasp on each clip, rotate them until the top is parallel then mark the center point with a black marker. Make sure your fabric stays centered around the light housing

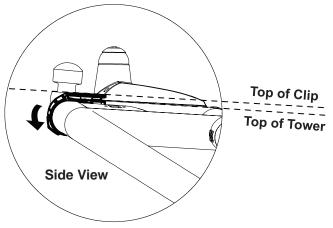

Fabric-Clips Installation: Step 3

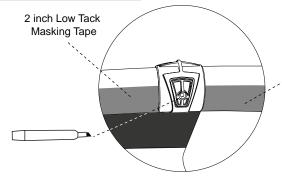

Once the top surface of each clip is parallel to the top of the tower, use a marker to mark the center mark for each bimini clip. Slide each clip out of the way of the center mark.

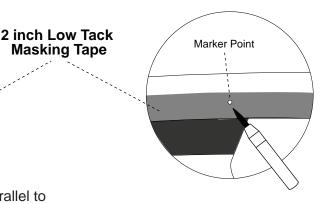

Center punch the 2 marker points on the masking tape.



Fabric-Clips Installation: Step 4 Center Punch Mark ***When drilling the holes for your bimini clip it is important to drill the holes perpendicular to the location of the hole to be drilled. This will allow for an optimal fit of the bimini clip.*** Side View Using a cordless drill and a 9/64" drill bit, drill holes through the tower where you made the 2 center ۵ 0-24 UNC punch marks. Using a tap and a 10-24 UNC bit,




Fabric-Clips Installation: Step 5

Remove the masking around the 2 newly drilled holes only. Slide the 2 bimini clips back so they line up with the newly drilled and tapped holes. Grab 2 of the provided bimini clip bolts from your bimini box. Apply a small amount of red Loctite to each bolt. Using a Phillips screwdriver, attach the bimini clips to the tower.


Do not overtighten these screws.






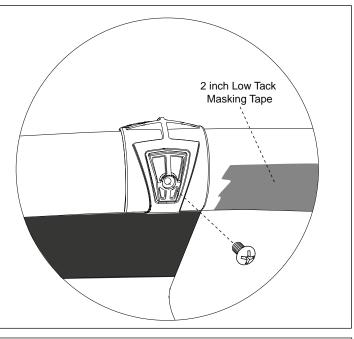


carefully tap each of the holes you just drilled.

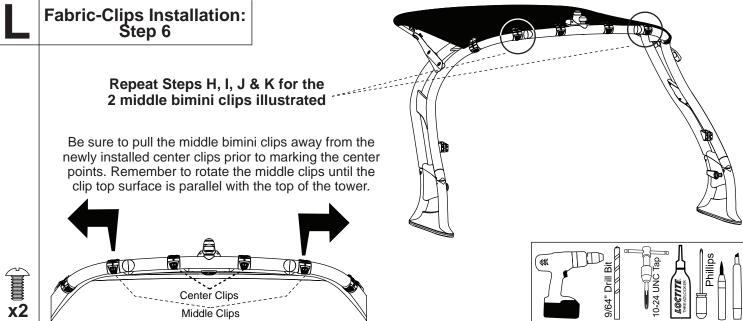

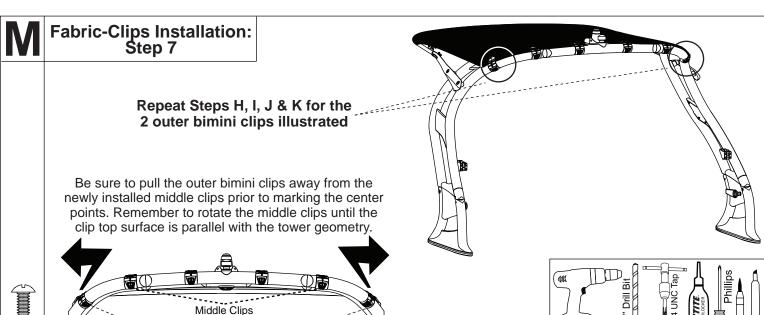




Breaking off the bimini clip locators

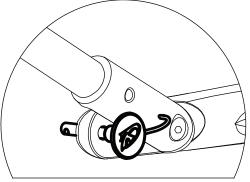

Outer Clips

1: Remove the folding quick release pins. Rotate the frame upwards and insert the guick release pins into the bimini arm only. This will hold the frame in an up position and reduce tension on the bimini clips. This step is required to properly remove the bimini clips.

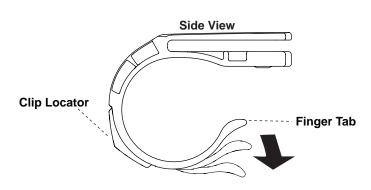


2 : Pull on the finger tab located at the bottom of each bimini clip until the clip locator breaks off.

Do not apply excessive force when flexing the clips.


How your bimini clips now look

Clips are attached to the bimini Canvas. Bimini Canvas is not illustrated for image clarity

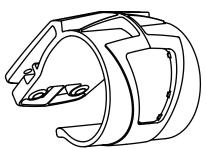

This is how your 6 bimini clips will look after breaking away the clip locators.


This is how the locators will look on the tower after you have broken the clips off.

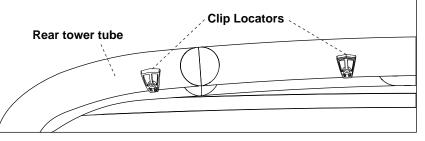




Trimming the locator posts

Unclip all of your bimini clips from the tower. Grab a sharp utility knife and carefully cut away the little locator posts on each bimini clip. There are 6 on each bimini clip. When trimming the posts always cut away from yourself.




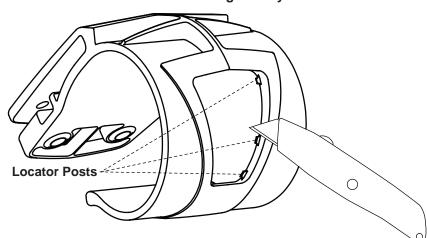





Final Steps

1: Re-clip all of your bimini clips to the tower. Use the finger tab to flex the clips over the tubing.

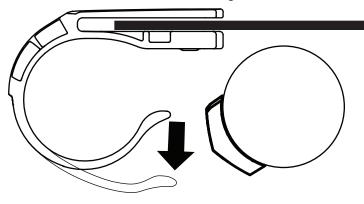

2: Insert the 2 folding quick release pins to lock your bimini frame in place.

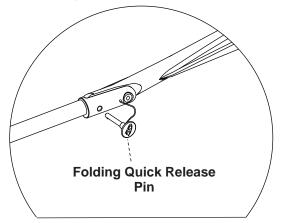

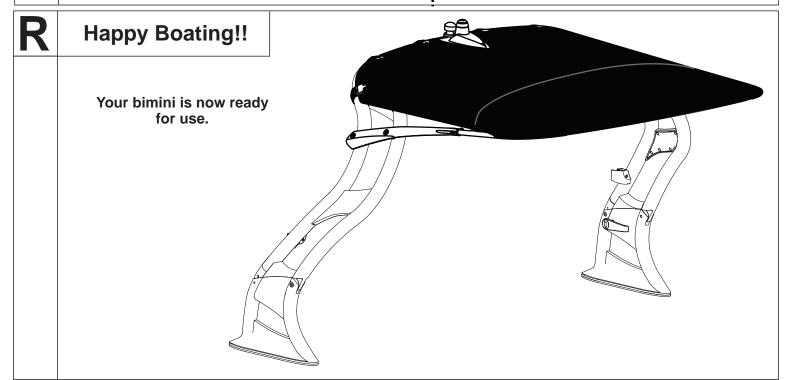






Important

Read & follow these instructions carefully. Failure to do so may result in damage to parts.

Damage to parts from improper use is not covered under warranty.

Attention

Using your bimini clips in freezing or near freezing temperatures is NOT recommended. Failure to do so will result in broken bimini clips. Damage to parts from improper use is not covered under warranty.

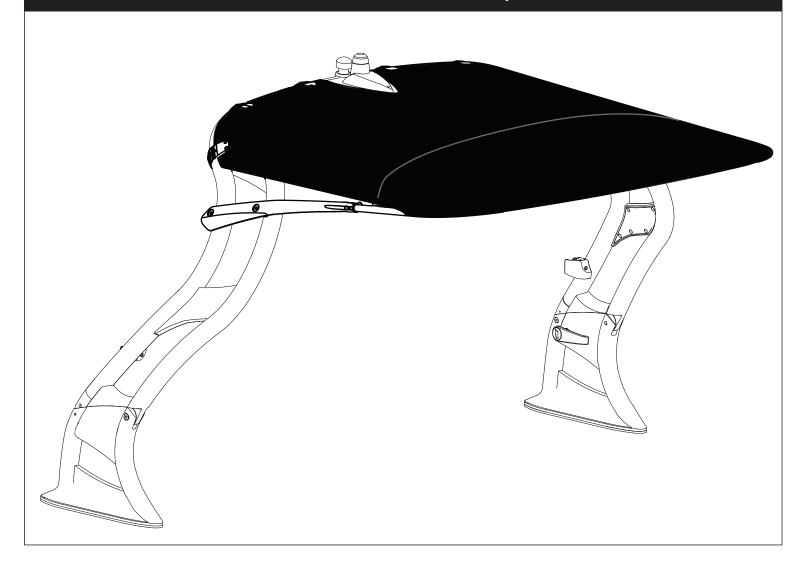

www.roswellwakeair.com


Information: info@roswellwakeair.com **Warranty:** warranty@roswellwakeair.com




A

Unfolding your 200 tower bimini


1: Undo the 2 Velcro straps that secure the bimini to your tower.

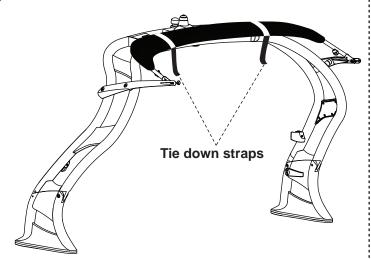


2: Insert the quick release pins into the bimini arm only. Rotate the bimini frame until it rests on the quick release pins as illustrated

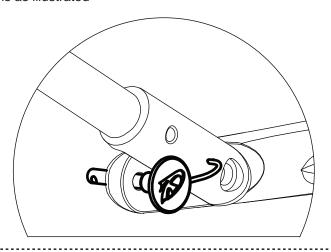


3: Unzip the bimini boot from the frame and canvas.

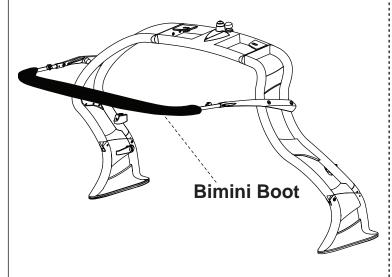


4: Pull the bimini hinge pins out of the 2 bimini hinges. Slide the middle bow into the bimini hinges. Re-insert the pins in the hinges

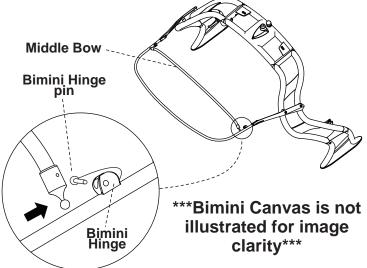

5: Clip all of your bimini clips to the tower. Use the finger tab to flex the clips over the tubing.

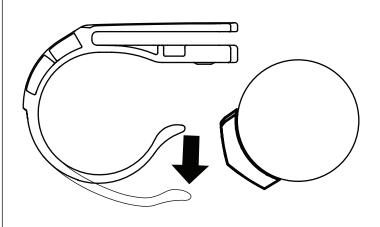


6: Remove your 2 quick release pins from your bimini arms. Pull down lightly on the bimini frame and re-insert the quick release pins through the bimini frame and arms. Your Bimini is ready to use.

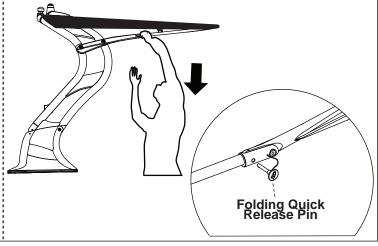




Folding up your 200 tower bimini

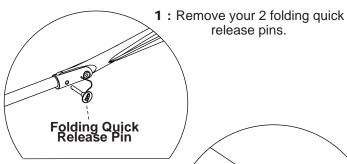


2: Rotate the frame upwards and insert the quick release pins into the bimini arm only.

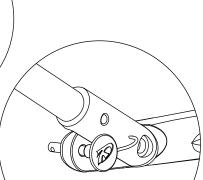


release pins.


3: Un-clip all of your bimini clips from the rear tower tube.

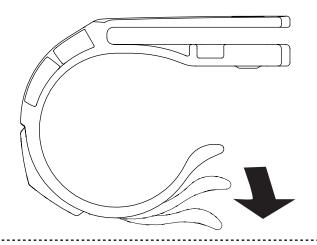


4: Pull the bimini hinge pins out of the 2 bimini hinges. Slide the middle bow out of the bimini hinges. Re-insert the pins in the hinges

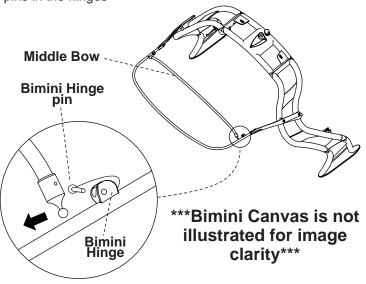


5: Fold the middle bow onto the front bow and wrap the fabric and clips around both bows. Zip the bimini boot over the bows and fabric.

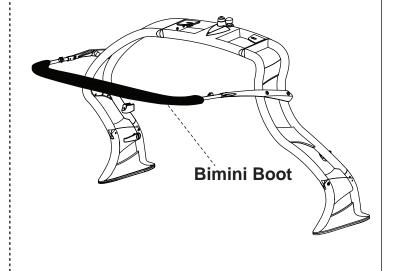

6: Fold the bimini towards the tower until it rests on top of the tower.

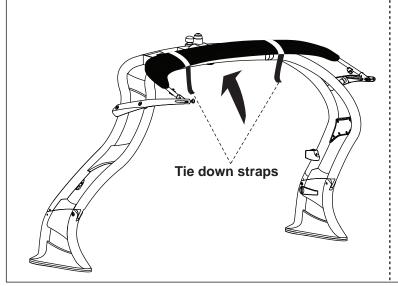


7: Loop the tie down straps over and under the front tower tube and velcro. Adjust the straps to tighten the bimini to the tower.

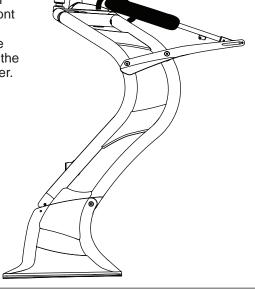



Tower folding / Trailering

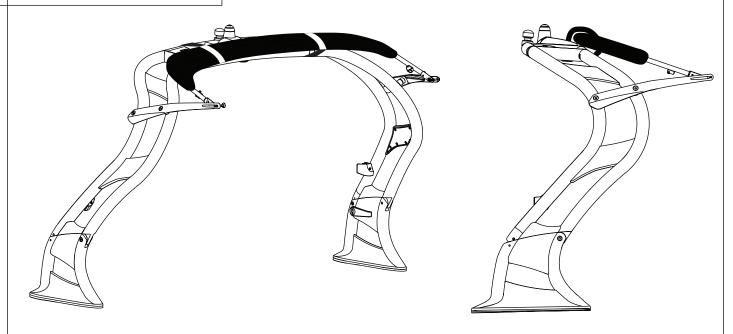


*** Illustrated is the ONLY acceptable way to safely fold your 200 Tower or trailer your 200 boat with the bimini on***



DO NOT TRAILER YOUR BOAT WITH THE BIMINI IN ITS OUTSTRETCHED POSITION

DO NOT FOLD YOUR TOWER WITH THE BIMINI IN ITS OUTSTRETCHED POSITION

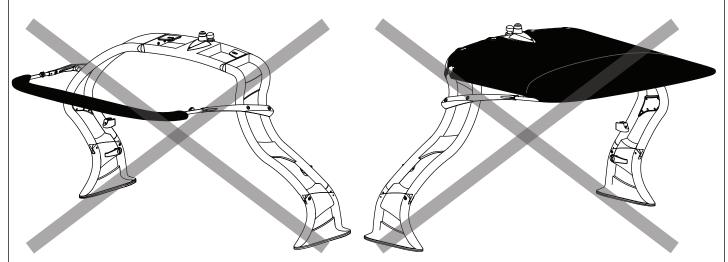

DO NOT FOLD THE TOWER OR TRAILER BOAT WITH BIMINI IN THIS POSITION

DO NOT FOLD THE TOWER OR TRAILER BOAT WITH BIMINI IN THIS POSITION






Tightening your 200 Tower Bimini Canvas

It is normal that your bimini canvas will stretch over time and use. Your 200 Bimini has been designed to allow you to tighten your canvas as needed.

There are 2 ways you can tighten your bimini canvas. You can use method 1, method 2 or a combination of both.

Canvas Tightening method 1

Your bimini clips are mounted to plates that are sewn to your bimini canvas. These plates have 3 sets of holes designed to allow you to move your bimini clip position to achieve a tighter canvas.

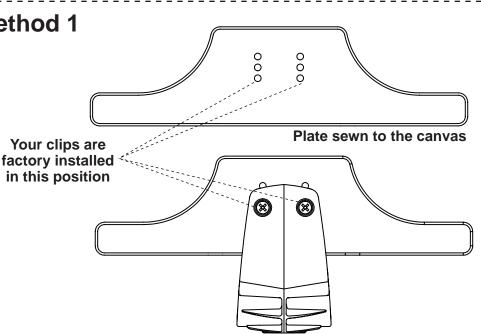

Clips are attached to the bimini Canvas. Bimini Canvas is not illustrated for image clarity


With a Phillips screwdriver, remove the 2 bolts that secure each bimini clip to the canvas. Slide each bimini clip over the new hole set that you would like to install them in.

It is recommended that the clips only be moved 1 hole position at a time.

Once the clip is lined up over the desired holes, re-secure the clips to the canvas using a Phillips screwdriver and the 2 bolts.

Do not overtighten these bolts



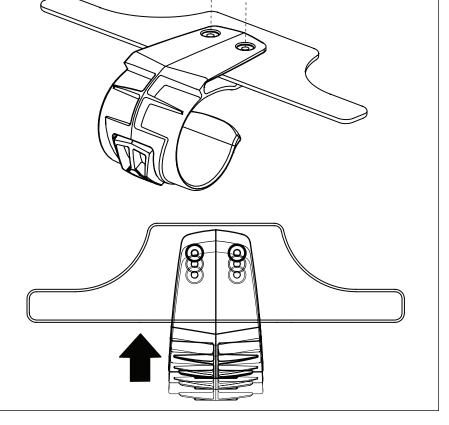





Tightening your 200 Tower Bimini Canvas


It is normal that your bimini canvas will stretch over time and use. Your 200 Bimini has been designed to allow you to tighten your canvas as needed.

There are 2 ways you can tighten your bimini canvas. You can use method 1, 2 or a combination of both.

Canvas Tightening method 2

This method is best executed with 2 people

Loosen the bimini arm bolts on port and starboard sides. Do not remove the bolts. Once all 4 bolts are loose have a friend lightly pull down on the bimini arms one side at a time. With the arms being pulled down, re-tighten the bimini arm bolts. Repeat on the other side.

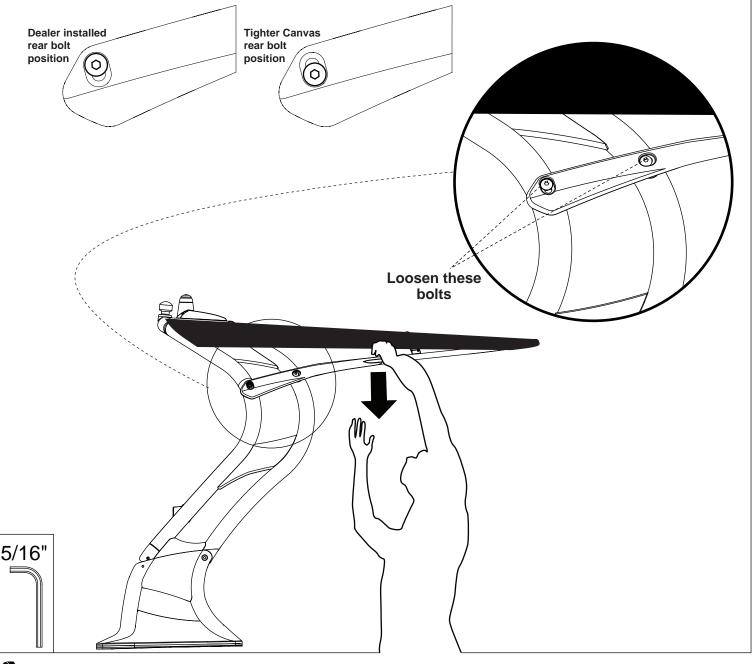







Tips and Tricks for your Bimini

It is normal that there is potentially a slight variation from one tower bimini to another. Listed below are some tips and tricks to ensure that your bimini is installed and functioning properly. This process is not mandatory for all biminis.


1: It is possible that once your bimini is installed your frame and arms are not parallel where they pivot. This could make inserting and removing your quick release pins difficult.

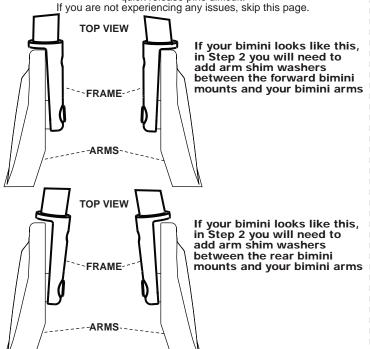


2: Grab the arm shim washers that were provided in your bimini arm box. Choose one side of your tower to work on first. Loosen the front bimini arm bolt. Completely remove the rear bimini arm bolt, oval washer and lock tooth washer. Slide 1 arm shim washer in between the rear tower bimini mount and bimini arm. Re-insert the rear bolt, oval washer and lock tooth washer. Apply loctite to the bolt first. Tighten down the front and rear bimini arm bolts in the same position they were in prior to loosening them. Repeat on the other side of your tower.

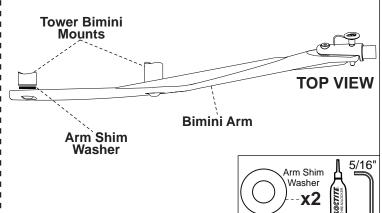

3: Now that your arm shim washers have been installed your frame and arms should be parallel or much closer. Test removing and inserting your quick release pins. If it is still difficult to remove or insert the pins proceed to the next step.

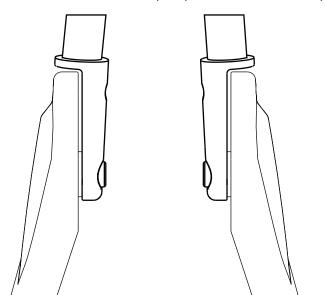

If your quick release pins are still difficult to remove and insert with the addition of the arm shim washers, Roswell recommends using a drill with a 5/16" drill bit to clean out the holes. Drill through the frame and bimini arms at the same time. This will help with the alignment and ensure an accurately aligned hole.

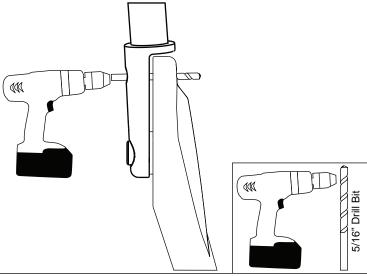

www.roswellwakeair.com

Information: info@roswellwakeair.com **Warranty:** warranty@roswellwakeair.com



